






Quick User Guide

TO TURN ON







To arm system with key fob: Press 

To arm system with key pad: Press either   or 









TO TURN OFF

Enter code into panel or Press  on the key fob





TURNING A ZONE OFF TEMPORARILY

Press 
Enter Master code
Press  
Using the arrow keys, scroll to the zone you want to bypass
Press  to change the bypass status.
Press , Save Changes? is displayed.
Press  to confirm the changed bypass status.

CHANGE CODE

Press 
Enter Master code
Press 
Press  until the code you want to edit and press 
Press  until Edit Code is displayed
Press , the 4-digit code is displayed with the cursor flashing on the first digit.
Type in the new code
Press , the new code is stored in the memory.
Press  5 times to come out of the User menu.

VIEWING THE EVENT LOG AFTER A FALSE ALARM

Enter Master code
Press  , the most recent event is displayed.
Press  to scroll through the events until you reach the last time the system was set.
Press  5 times to come out of the User menu.



TURNING THE DOOR CHIMES ON/OFF

Press    then ✓

FAULT FINDING

Press , this will tell you what is wrong.

IF ONE OF YOUR KEYFOBS IS LOST OR STOLEN

Contact your engineer immediately

SYSTEM TROUBLE MESSAGES

Supervision loss = transmission failure – Call engineer.

Battery Low [MFB] = Keyfob battery low – Change battery.

note: All Battery Low messages will indicate which device has the low battery

A/C Power Loss = Check for power – Call engineer.

Note: Battery Low and A/C Power Loss will also be indicated by a flashing green LED on the control panel (steady=Battery / rapid=A/C power)

